

## Lead Level Installation / Trimming Lid




Install where you want.




Leave about 1/16" off wall.



Remove the float, install lid.

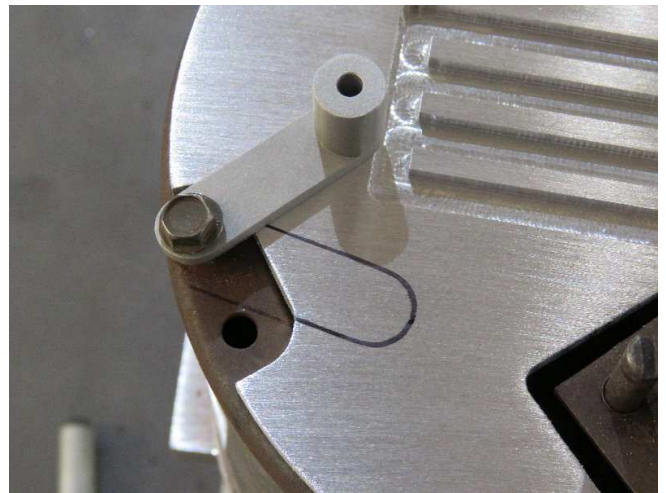

Mark the lid for cutout.

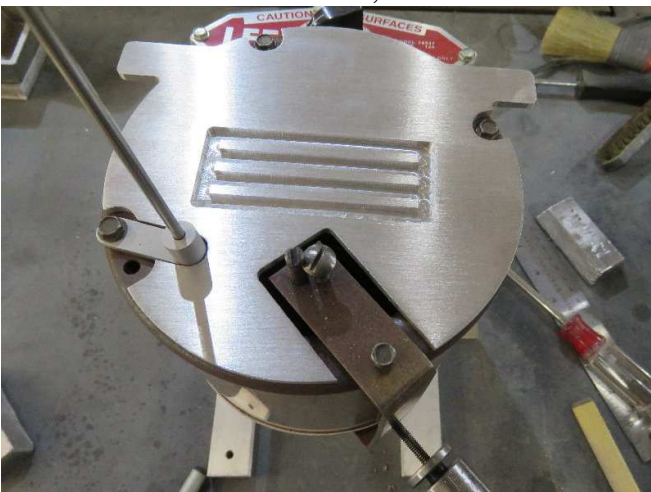

Cut out lid. See tip below.



120 sandpaper on curved wood.

Tip: Start with a small pilot drill bit in center and work up to final size. .125" to .404" used above in 5 steps. Cut straight lines with hack saw, band saw or rotary tool. Use 120 sandpaper on rounded wood to smooth out.